設計変更による取扱説明書の訂正

本製品は電源部分を改良したため、電圧切り替えスイッチが無くなりました。
このため、取扱説明書の内容を以下のように訂正します。

安全上のご注意 (DV-7DL-G / DV-7DL PRO 取扱説明書 P.3、PR-50 取扱説明書 P.3)

削除→

● 電圧切り換えスイッチは、電源電圧を切り換えます。不用意に切り換えないでください。外国で使用する等で切り換えが必要な場合は、お買い上げ店またはローランド イーディー・サービスステーションに相談してください。

本体背面 (PR-80 取扱説明書 P.9、PR-50 取扱説明書 P.12)

訂正→

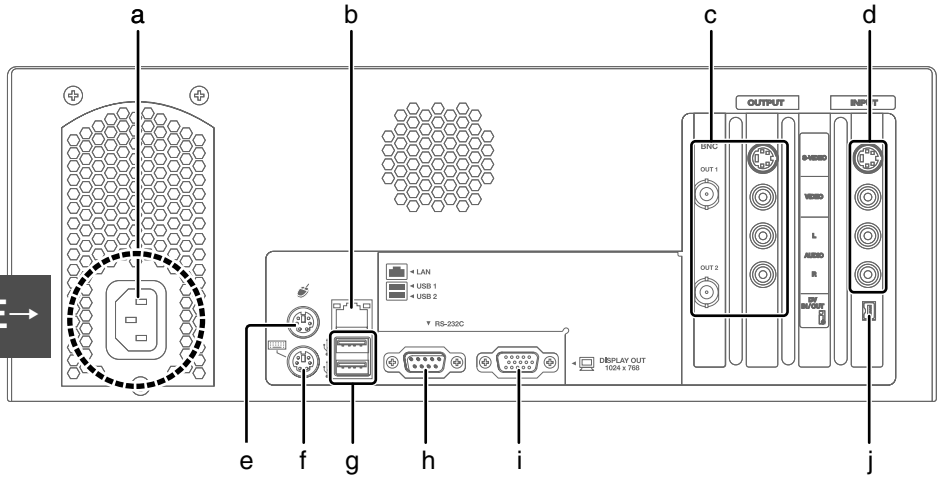

訂正→

a. AC 接続端子

付属の電源コードを接続します。

本体背面 (DV-7DL-G / DV-7DL PRO 取扱説明書 P.21)

訂正→

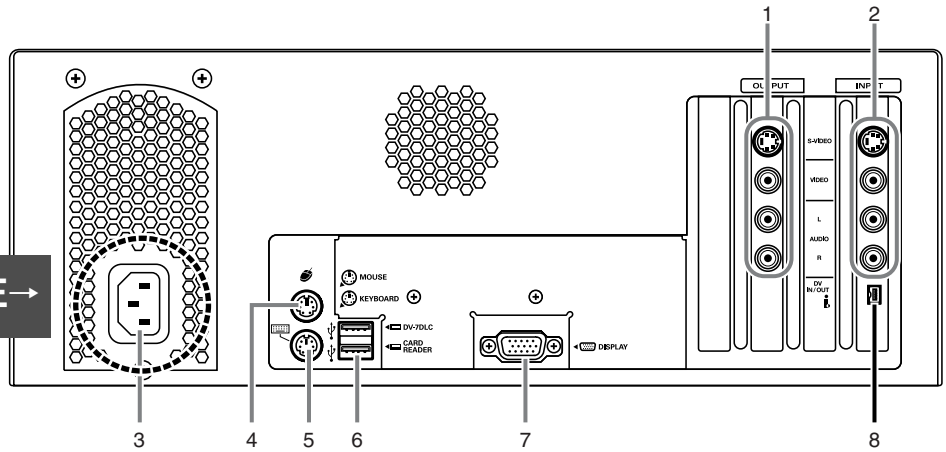

© 2006 ローランド株式会社 本書の一部、もしくは全部を無断で複写・転載することを禁じます。

Revision of the Owner's Manual Due to Change in Design

The power supply for this product has been modified, eliminating the voltage switch.
Accordingly, the Owner's Manual should be revised as follows.

USING THE UNIT SAFELY (DV-7DL-G / DV-7DL PRO Owner's Manual P.3, PR-50 Owner's Manual P.4)

Delete >

- The Voltage Selection Switch permits you to operate the unit with a number of different line voltages. You must never change the switch setting unless you are absolutely sure of what is appropriate for the region you are located. Always consult with your dealer, or qualified Roland service personnel before touching the switch.

Rear Panel (PR-80 Owner's Manual P.9, PR-50 Owner's Manual P.13)

Correct >

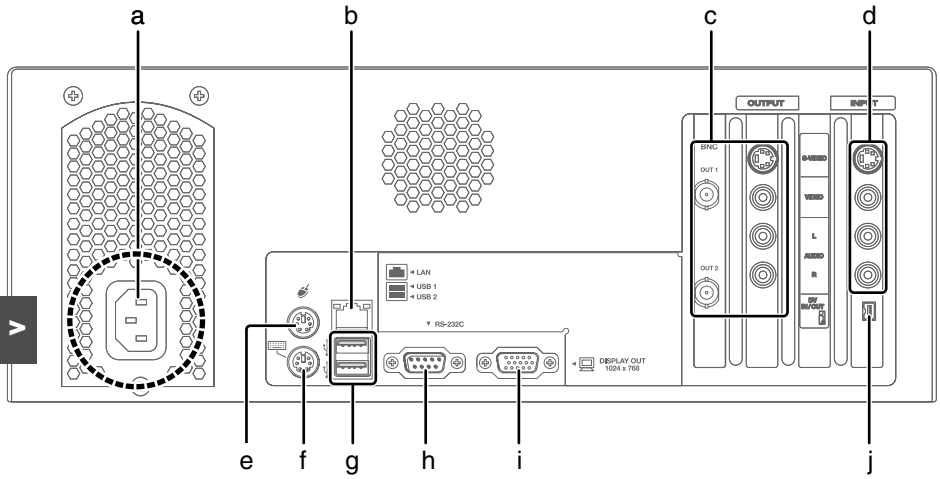

Correct >

a. AC Socket

Connect the included power cord here.

Rear Panel (DV-7DL-G / DV-7DL PRO Owner's Manual P.17)

Correct >